



JETRICH CANADA LTD: 3270 Orlando Dr., Mississauga, Ontario, L4V 1C6, CANADA

Thank you for purchasing the Chris & Chris Chef series kitchen work station.

With proper assembly, maintenance, and cleaning, your work station will give you many years of service.

NOTE: IF THERE ARE ANY PARTS MISSING; OR THERE IS SLIGHT SHIPPING DAMAGE TO YOUR UNIT, DO NOT RETURN TO THE STORE. PLEASE CONTACT OUR CUSTOMER SERVICE DEPT. FOR HELP, OR VISIT OUR WEBSITE FOR FURTHER INFORMATION.

CUSTOMER SERVICE: TOLL FREE NUMBER: 1-800-569-4201

E-MAIL: customerservice@chrisandchrishome.com

WEBSITE: chrisandchrishome.com

ASSEMBLY TIPS: **JET9328, JET9329, JET9330** "PRO CHEF" WORK STATION"

TOOLS NEEDED: PHILLIPS HEAD SCREWDRIVER

- Unpack all parts carefully. Cover work surface with soft blanket or similar substance so as not to damage the unit or your work surface.

Step 1

- Locate part (Y1) 2 each and (C2) 1 EACH. Assemble with medium bolt (YM) and barrel nut (BN) per step 1 drawing. Put aside for now.

Step 2

Locate the 4 legs (A) which are identified as (LB) left back, (LF) left front, (RB) right back, and (RF) right front. Assemble (LB) to (LF) using (M) bottom side frame and (E) side shelf frame. Just press together per the drawing in step 2. No bolts are necessary in this assembly. NOTE the shelf bracket on part (E) should face to the inside and be to the top side.

Step 3

Repeat the same procedure as in step 2 using (RB) and (RF)

Step 4

Lay the top assembly (TF) upside down on your work surface. Attach the right and left leg assemblies to the top Frame (TF) using barrel bolts (YL) and barrel nuts (BN).NOTE: Attach one side first, to allow for the installation of the pre-assembled shelf support (C) and the bottom slat shelf (B). Secure the shelf support (C) with barrel bolts (YL) and barrel nuts (BN). Repeat the procedure with the slat shelf (B)

Now attach the remaining leg frame by lining up the dowels on top (TF), Shelf support (C), and slat shelf (B) with the corresponding holes in the leg frame. Secure with barrel bolts (YL) and barrel nuts (BN).

Step 5

Install 2 brake wheels (BW) into the threaded brackets on the 2 legs facing the front of the cart and 2 wheels (W) on the 2 legs facing the rear of the cart. Tighten firmly using caster wrench (Q).

Slide the 4 "S" Hooks (K) on to the towel bar (F) so that the open ends of the hooks are facing outward. Now mount the towel bar (F) into the holes on either end of top frame (TF), you may choose on which side you prefer the towel bar to be mounted.

Secure the towel bar in place using bolts (SM). Turn the kitchen work station over

Step 6

Now install the drawer handle (H) to the drawer using the screws supplied. The drawer handle and screws are mounted on the inside of the drawer for shipping

The speed rack (S) can be set in the towel bar (F) at this time. Install the 2 basket shelves (AS).

Knife holder (KH) (CAN BE PURCHASED AT WWW.CHRISANDCHRISHOME.COM) will fit on top of the speed rack for use and in the drawer when not in use.

Step 7


The chef pan (P) mounts in the back side of the cart and can be interchanged with trash ring (L) by inserting a standard plastic grocery bag up through the center of the trash ring (L) and wrapping it over the edges of the ring and sliding it into the chef pan glides. (G) the tablet and phone holder can be used to hold your tablet or phone upright hands free while you work so you can easily follow your favorite recipes

Use wood plugs (WP) to cover the bolt holes in the legs and wood Plugs (NP) to cover the 2 remaining hole in the top


Congratulations, your Pro Chef work station is ready for action

CHEF KITCHEN WORK STATION
JET 9328 / JET 9329 / JET 9330
ASSEMBLY INSTRUCTION

Customer Service Email:
customerservice@chrisandchrishome.com

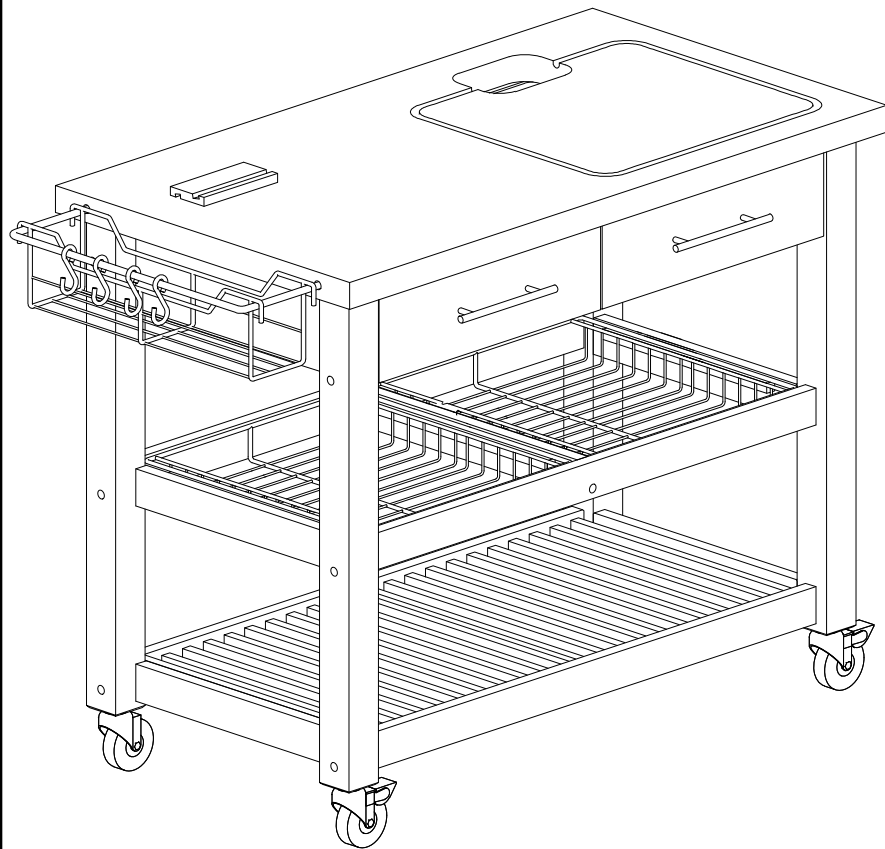


TF. TOP PART

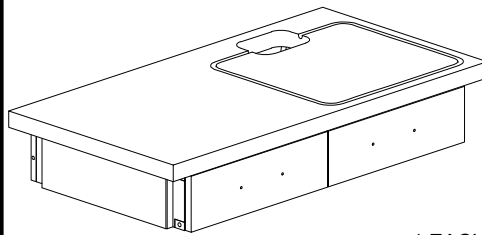


1 EACH

B. WOODEN SLAT SHELF

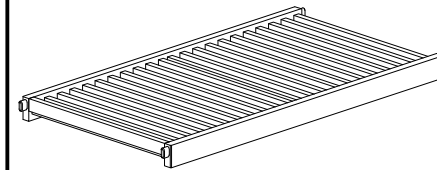


1 EACH

A. LEGS

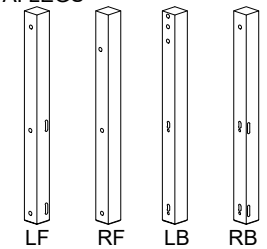


4 EACH

C2.

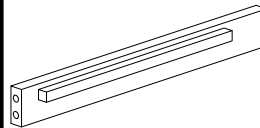


1 EACH

 M. BOTTOM SIDE FRAME




2 EACH

 E. LEFT/RIGHT SHELF FRAME




2 EACH

 Y1.




2 EACH

 G.




1 EACH

AS. BASKET

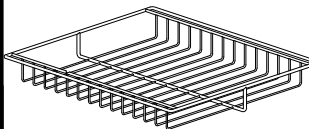


2 EACH

P. CHEF PAN

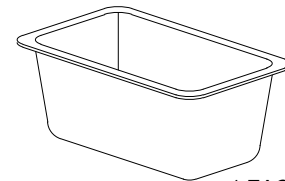


1 EACH

S. SPEED RACK

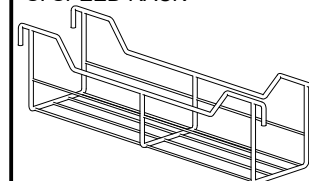

1 EACH

 F. TOWER BAR




1 EACH

L. TRASH RING



1 EACH

H. HANDLE

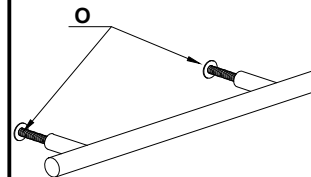

2 EACH


K. "S" HOOK



4 EACH


ASSEMBLY INSTRUCTION

BW. BRAKE WHEEL

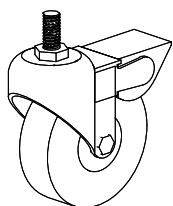


2 EACH

W. WHEEL

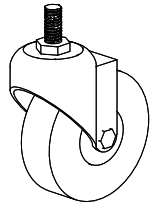

2 EACH

 YM. MEDIUM BOLT



2 EACH

YL. LONG BAREL BOLT



12 EACH

SM. SHORT BOLT



 
2 EACH

NP. NATURAL WOOD PLUS



2 EACH

Q. WRENCH



1 EACH

RM. ALLEN KEY



1 EACH

WP. WOOD PLUS



 
14 EACH

BN. BAREL NUT




14 EACH

O. OIL




1 EACH


STEP 1

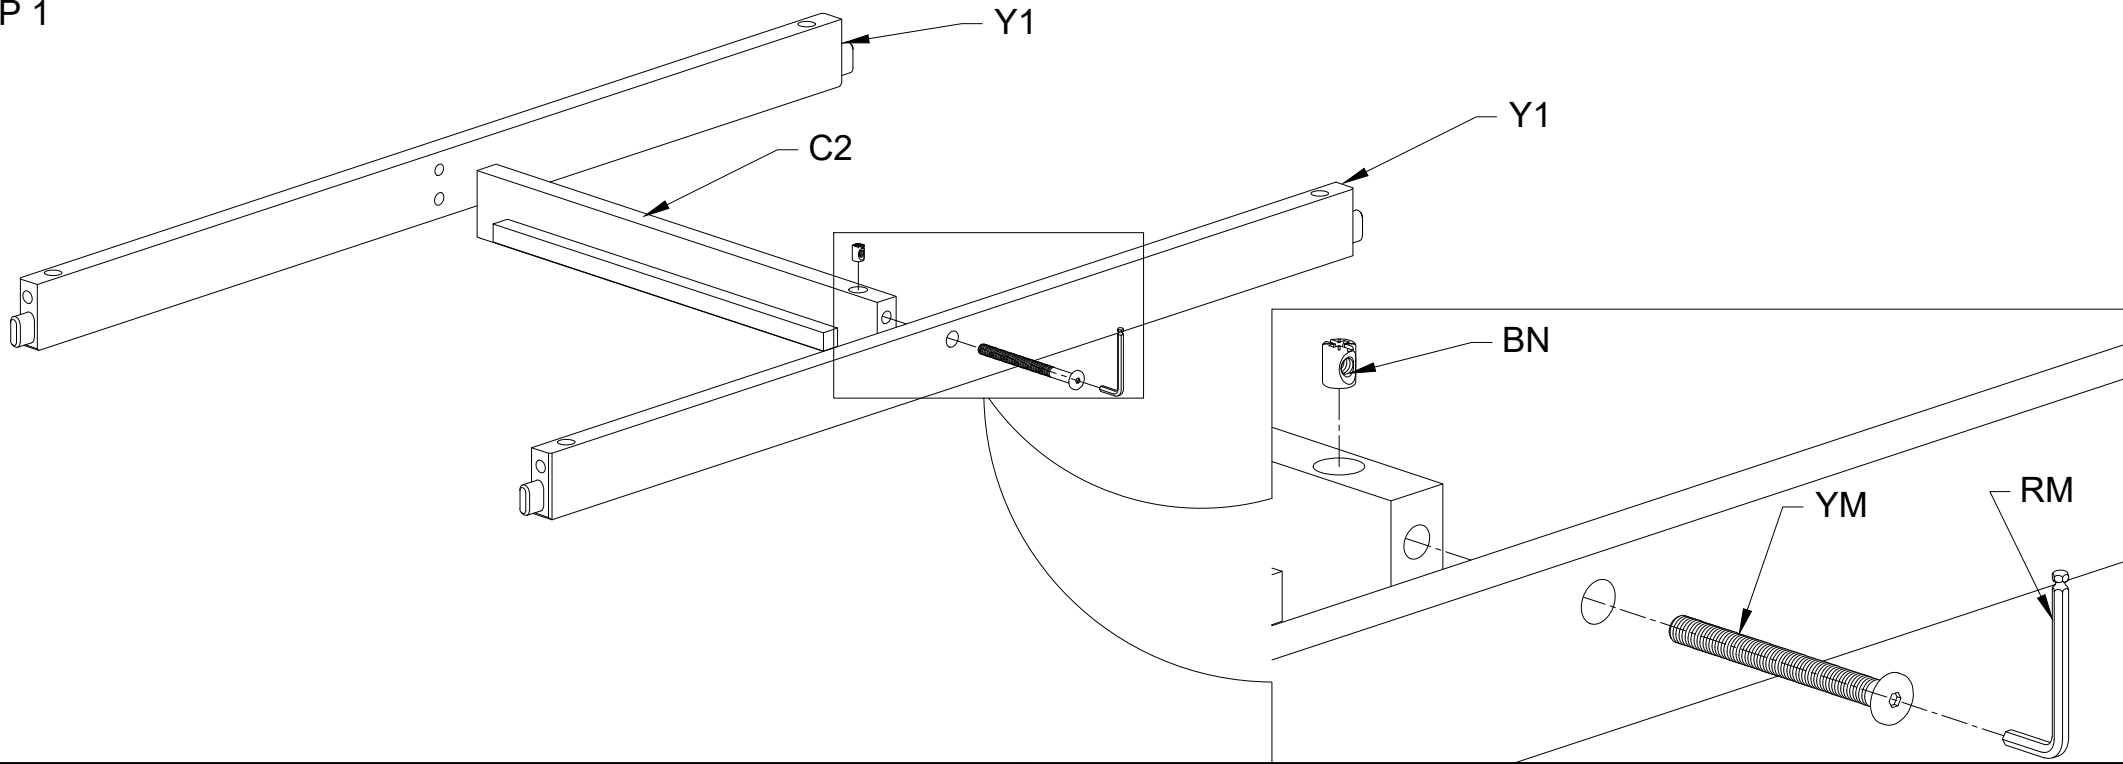


STEP 2

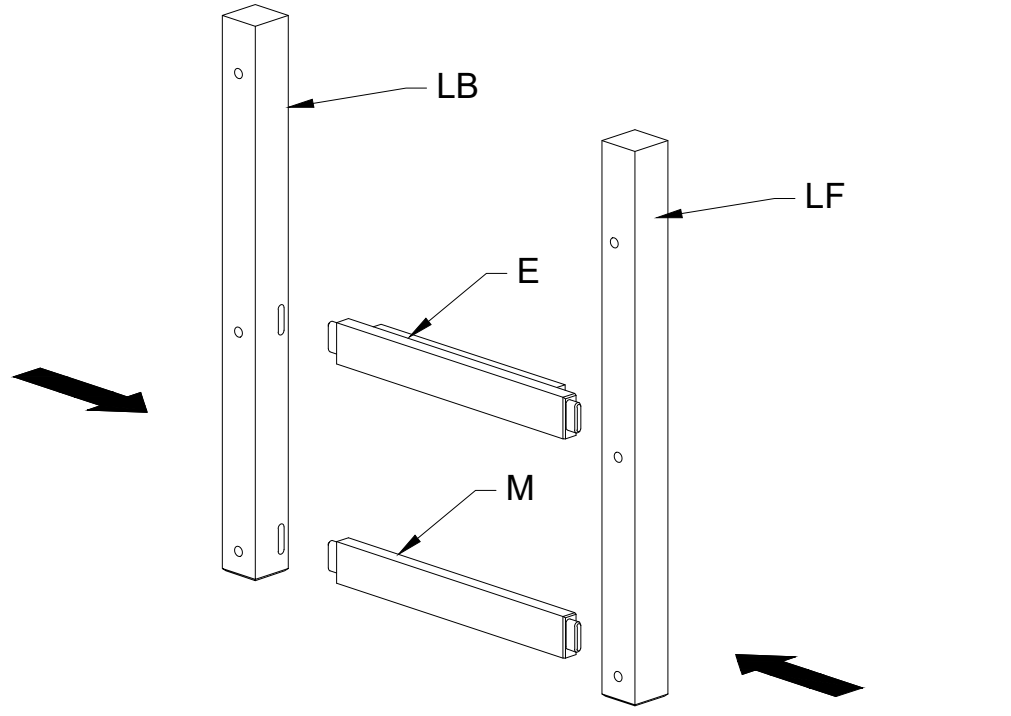


STEP 3

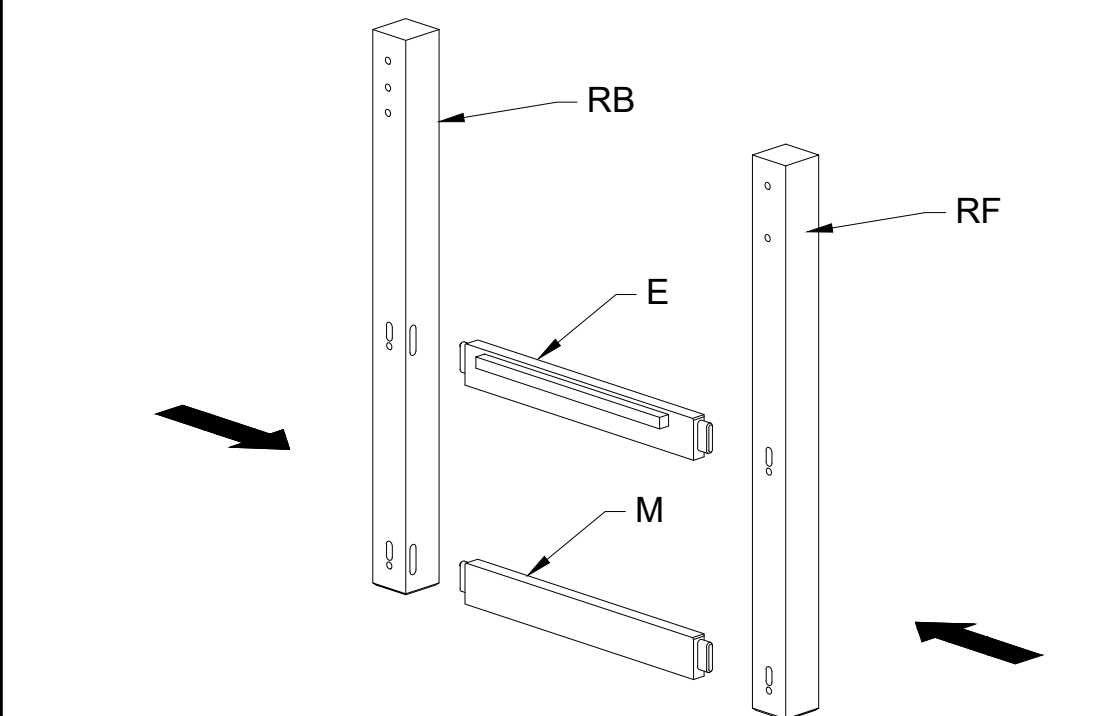



STEP 4

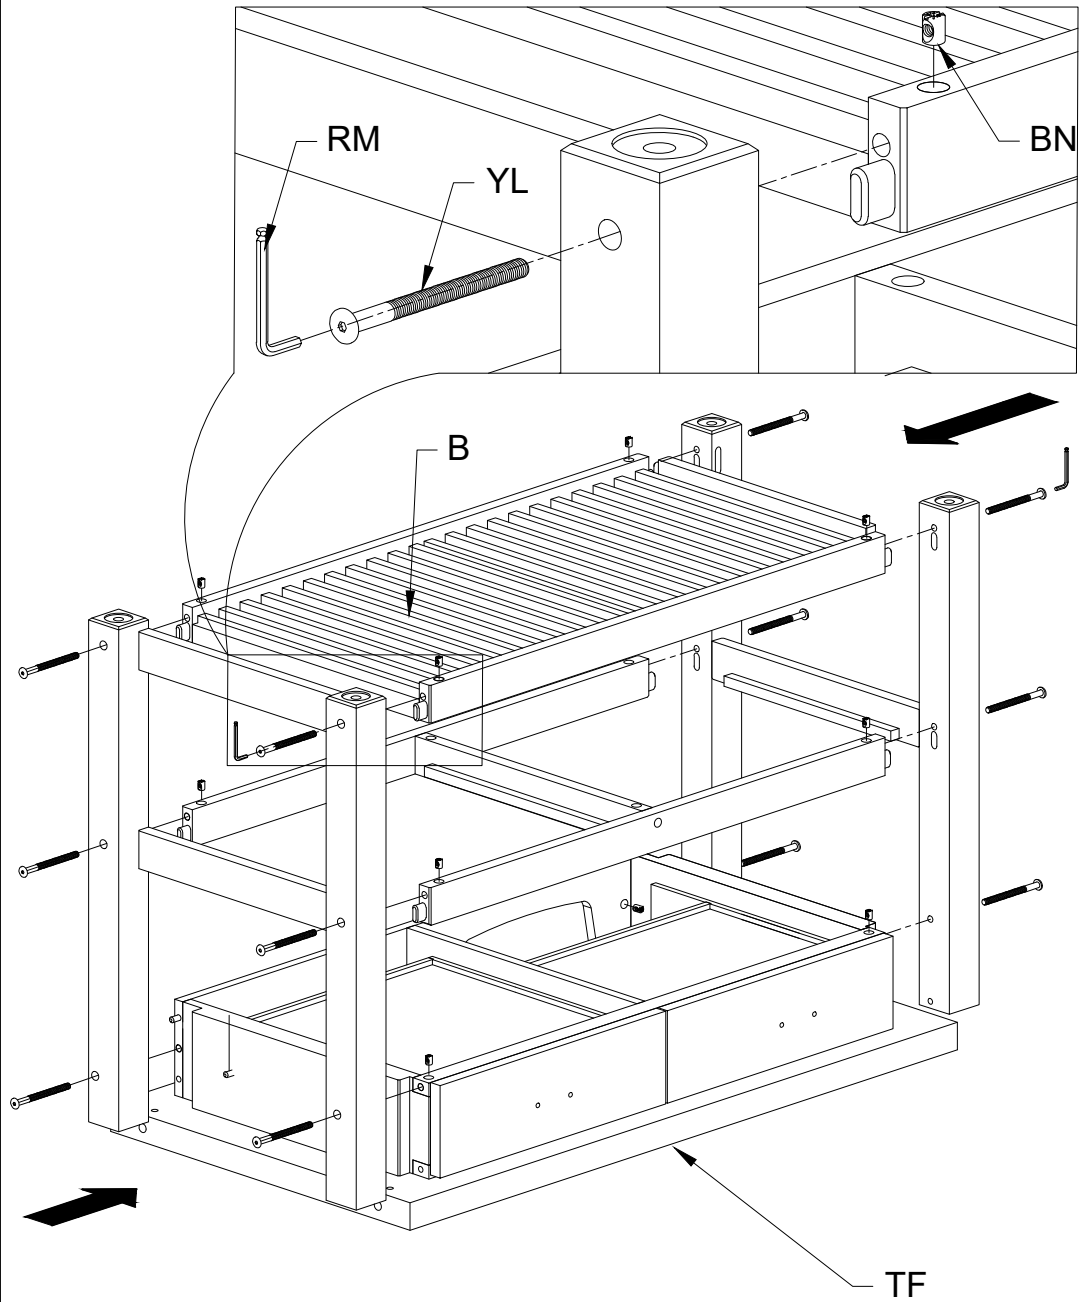

STEP 5

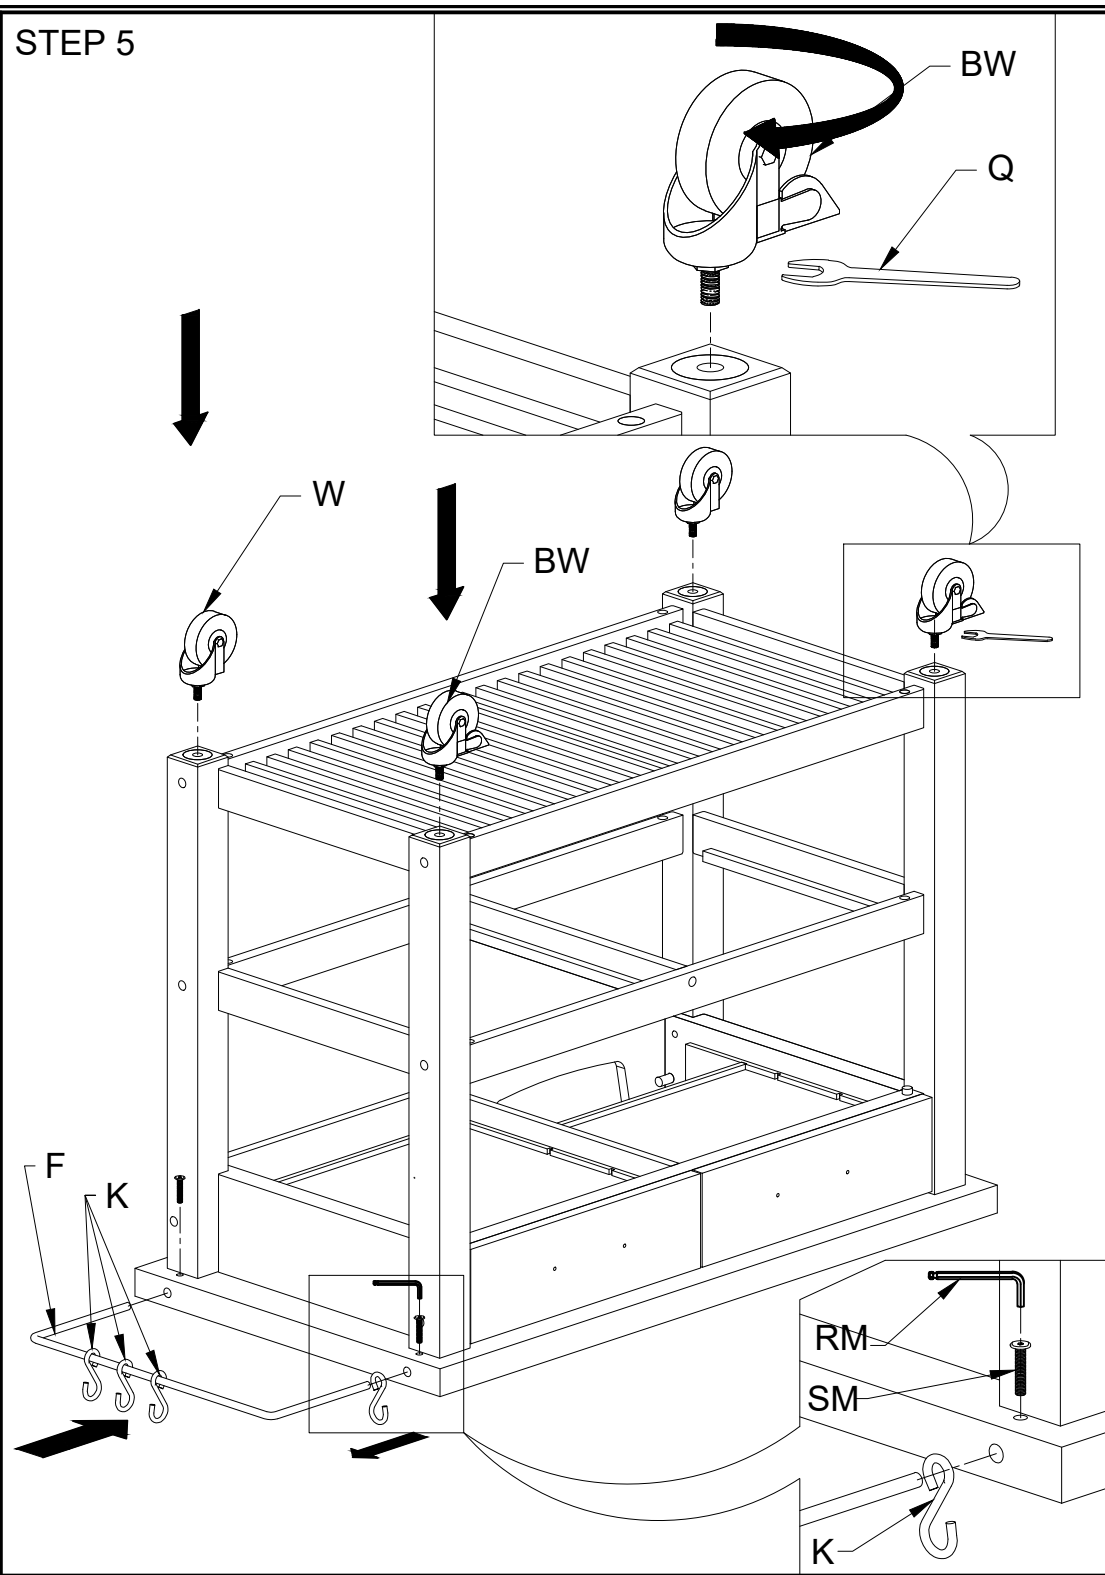

STEP 6

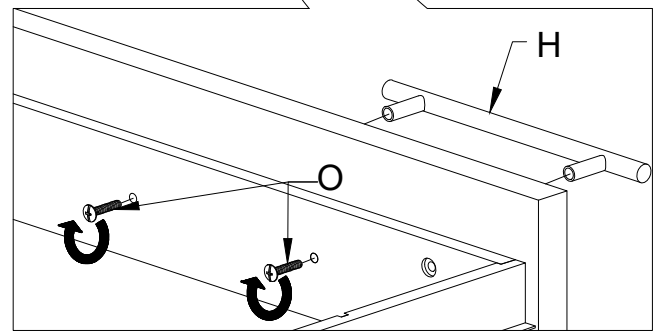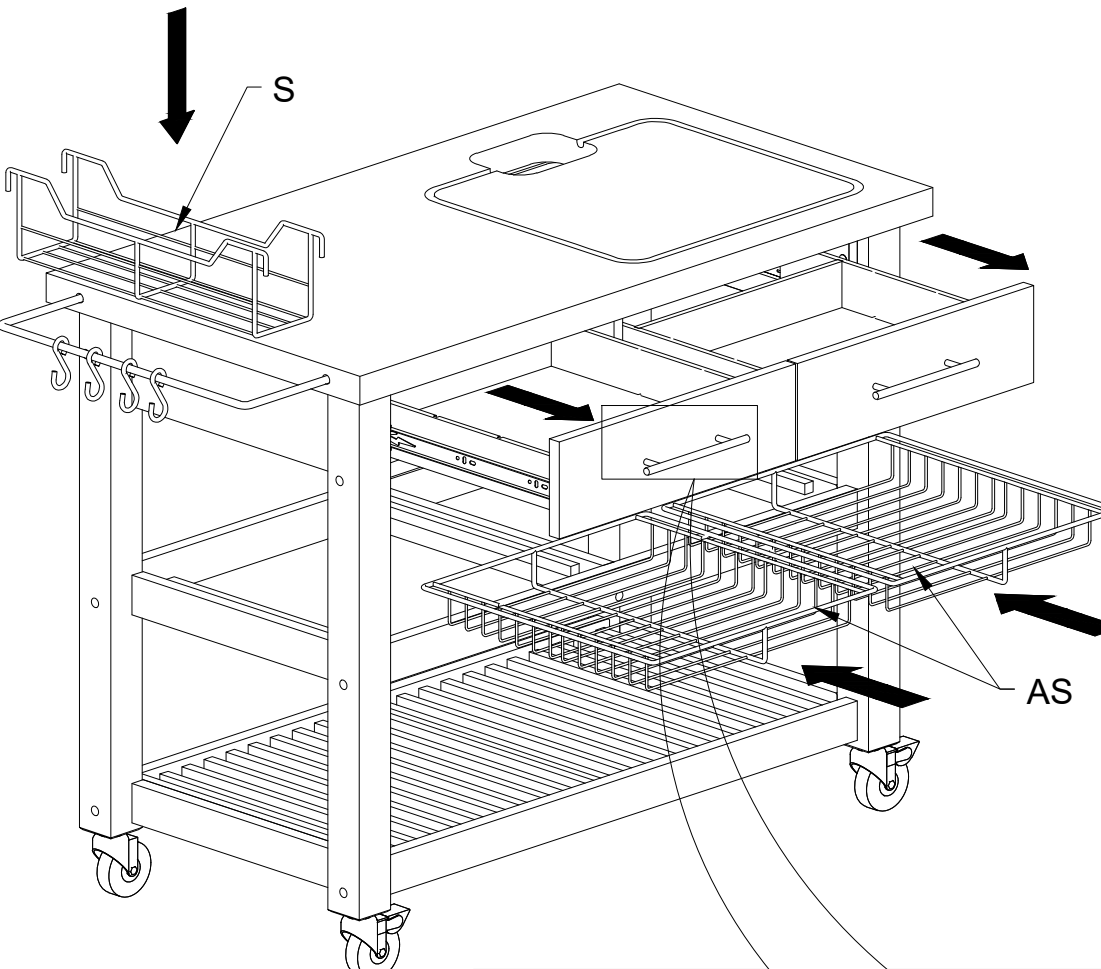

STEP 7

